


## Manual, Assembly instruction: Brodit 852293

Center mount

1.)

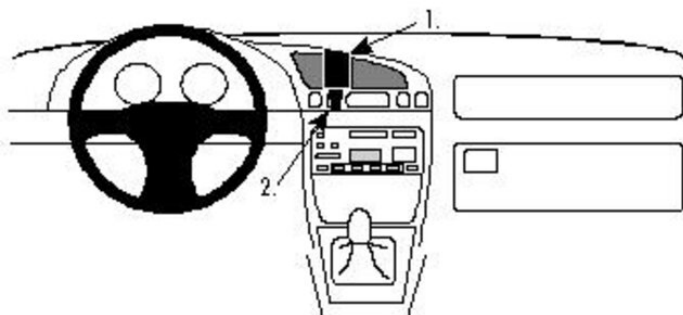

**Attention! Read all instructions before attaching the ProClip**

1. Press the short upper part of the ProClip into the gap at pos.

1.

2. Press the lower part of the ProClip into the gap at pos. 2.