

Manual, Assembly instruction: Brodit 852309

Angled mount


1.)



2.)



3.)

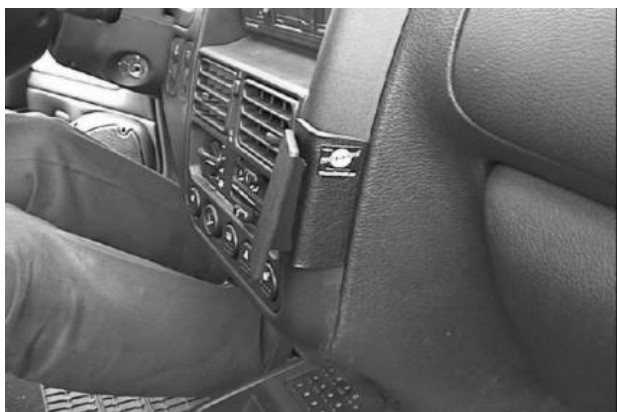

4.)



Attention! Read all instructions before attaching the ProClip

1. Press one of the two enclosed gap openers into the gap between the panel and the surrounding frame at pos. x. Slide the gap opener down the frame to pos. x.a. to widen the gap.
2. Press the other gap opener into the gap between the panel frame and the surrounding frame at pos. x.b to widen the gap.
3. Press the left part of the ProClip, with curve, into the gap between the panel frame and the surrounding panel at pos. 1.
4. Hook the ProClip over the console frame and press the right part of the ProClip into the gap between the panel frame and the surrounding panel at pos. 2. Pull out the gap openers.