


## Manual, Assembly instruction: Brodit 852337

Center mount

1.)

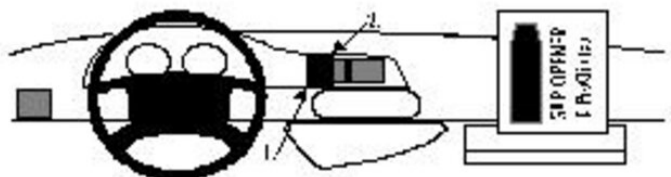

### **Attention! Read all instructions before attaching the ProClip**

1. Press the thin end of the enclosed Gap Opener (Spaltöffner) into the gap at pos. 1 to widen the gap. Clean the surface at pos. 2 with the enclosed alcohol pad. Peel off the cover of the adhesive tape on the ProClip.
2. Press the lower part of the ProClip, with groove, into the gap next to the Gap Opener (Spaltöffner) at pos.
- 1.
3. Press the upper part of the ProClip, with adhesive tape, into the gap at pos. 2.