


Manual, Assembly instruction: Brodit 852373

Center mount

1.)

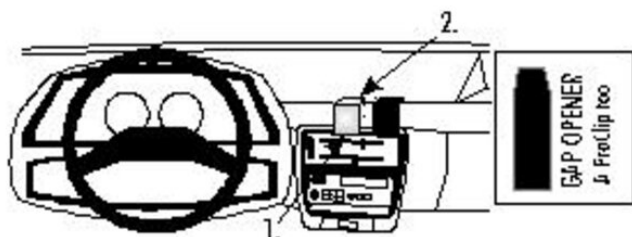

Attention! Read all instructions before attaching the ProClip.

1. Press the thin end of the enclosed Gap Opener (Spaltöffner) into the gap between the climate control panel and the surrounding panel frame at pos. 1 to widen the gap.
2. Press the curved edge on the lower part of the ProClip into the gap next to the Gap Opener (Spaltöffner) at pos. 1. Pull out the Gap Opener (Spaltöffner).
3. Press the grooved edge on the upper part of the ProClip into the gap in the dashboard at pos. 2. Slide the ProClip into position as shown in the picture.