


Manual, Assembly instruction: Brodit 852384

Angled mount, ONLY in Canada

1.)



2.)

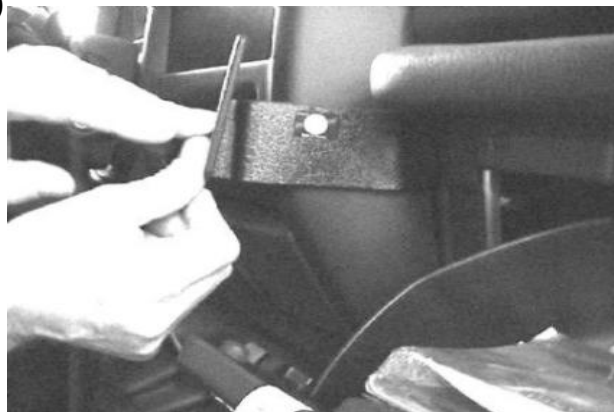

3.)



4.)



Peel off the cover of adhesive tape on the ProClip.

1. Press the curved edge on the left side of the ProClip into the gap between the climate control panel and the surrounding panel frame. Press until you see or hear/feel it snaps into place.

2. Press forward on the right side of the ProClip so the angled edge snaps over the console wall edge and into the gap between the console wall and the dashboard.

3. If the angled edge is hard to get into place, press on the edge so it snaps into place.

4. The ProClip in place.