


Manual, Assembly instruction: Brodit 852429

Center mount

1.)

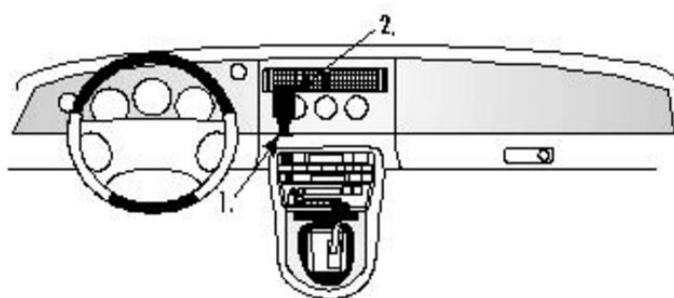

Attention! Read all instructions before attaching the ProClip.

1. Peel off the adhesive tape cover on the ProClip.
2. Press the grooved edge on the lower part of the ProClip into the gap between the padded dashboard and the wood grain panel frame at pos.
- 1.
3. Place the upper part of the ProClip into the gap between the movable part of the air vent and the bottom of the air vent house at pos.
2. Press down a few seconds so the adhesive attaches firmly.