


## Manual, Assembly instruction: Brodit 852430

Angled mount

1.)

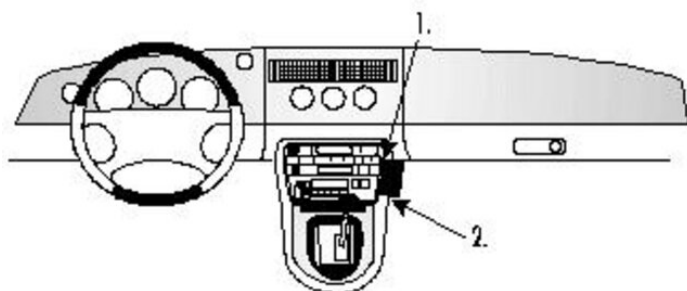

**Attention! Read all instructions before attaching the ProClip.**

1. Press the left part of the ProClip into the gap at pos.

1. Press until you see or hear + hear it snap into place

2. Press forward on the right side on the ProClip so the angled edge hooks over the edge of the console at pos. 2.