


Manual, Assembly instruction: Brodit 852482

Center mount

1.)

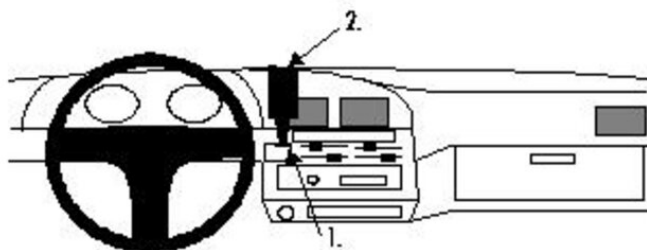

Attention! Read all instructions before attaching the ProClip.

1. Clean the surface underneath the panel frame overhang at pos. 1 with the enclosed alcohol pad. Peel off both adhesive tape covers on the ProClip.
2. Press + hook the angled edge on the lower part of the ProClip into the gap between the panel frame overhang and the panel frame surrounding the watch.
3. Flip the ProClip upwards and forward towards the dashboard so the angled edge on the lower part hooks behind the frame.
4. Press the grooved edge of the ProClip into the gap between the panel frame and the padded dashboard at pos.2. Press until you see or hear + feel it snaps into place.