


Manual, Assembly instruction: Brodit 852510

Center mount

1.)

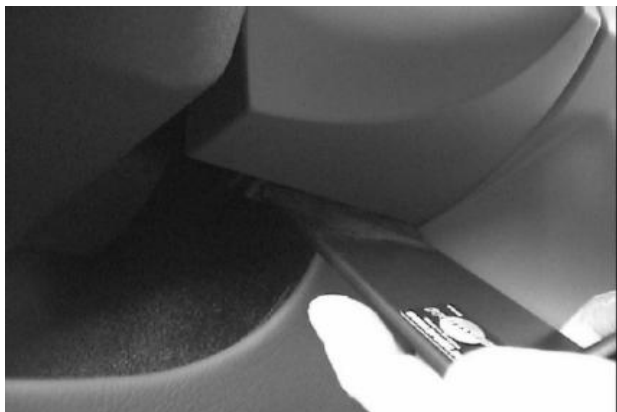

2.)



3.)



4.)



Attention! Read all instructions before attaching the ProClip

1. Clean surface at pos. 2. with the enclosed alcohol pad. Peel off the adhesive tape cover on the ProClip.
2. Press the lower part of the ProClip, with angle, into the gap between the dashboard and the panel frame at pos. 1. Slide the angled part of the ProClip sideways into pos. X.
3. Hook the upper part of the ProClip, with adhesive tape, into the gap between the panel frame and the air vent at pos. 2.