


Manual, Assembly instruction: Brodit 852515

Center mount

1.)

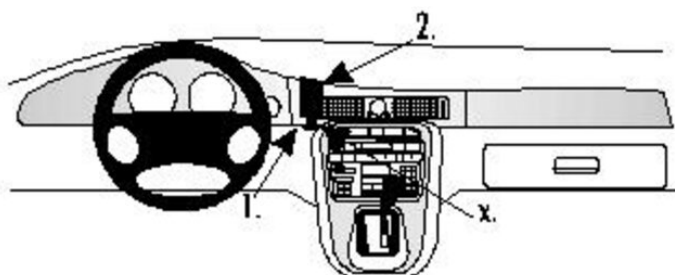

Attention! Read all instructions before attaching the ProClip.

1. Press the grooved edge on the lower part of the ProClip into the gap between the wood grain panel and the padded dashboard at pos.

1.

2. Slide the ProClip to the right at pos. x.

3. Press grooved edge on the upper part of the ProClip into the gap between the wood grain panel and the padded dashboard at pos. 2.