


Manual, Assembly instruction: Brodit 852583

Center mount

1.)

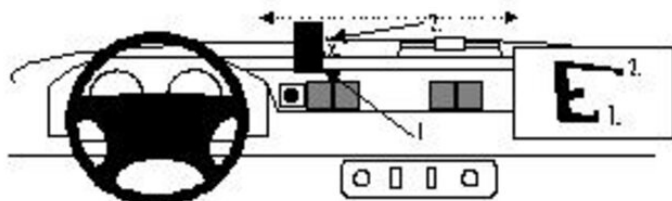

Attention! Read all instructions before attaching the ProClip

1. Clean the surface at pos. x. with the enclosed alcohol pad. Peel off the cover of the adhesive tape on the ProClip.
2. Press the lower part of the ProClip into the gap between the panel frame and the padded dashboard at pos. 1.
3. Hook the long upper part of the ProClip into the gap on top of the dashboard at pos. 2.