


Manual, Assembly instruction: Brodit 852604

Center mount ONLY for K11.

1.)

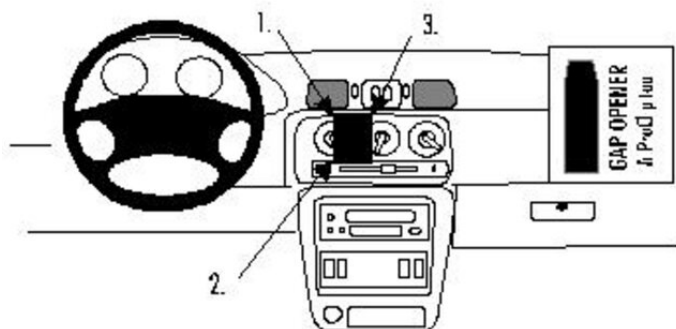

1. Press the thin end of the enclosed Gap Opener (Spaltöffner) into the gap between the air vent control panel and the dashboard at pos.

1. to widen the gap and peel off the cover of the adhesive tape of the ProClip.

2. Hook the lower angled part of the ProClip under the air vent control frame at pos.

2.

3. Press the upper part of the ProClip into the gap next to the Gap Opener (Spaltöffner) (between the air vent control panel and the dashboard) at pos.

1. Pull out the Gap Opener (Spaltöffner).