


Manual, Assembly instruction: Brodit 852605

Center mount ONLY for Limousine model.

1.)

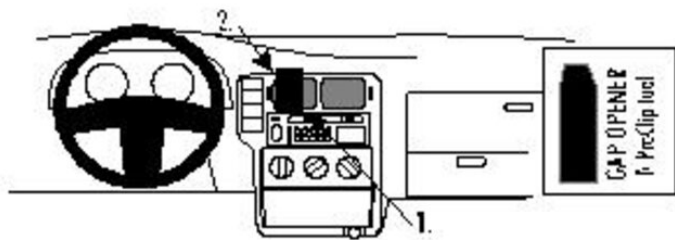

Attention! Read all instructions before attaching the ProClip

1. Clean the surface at pos. 1 and pos. 2 with the enclosed alcohol pad. Peel off both adhesive tape covers on the ProClip.
2. Press the thin end of the enclosed Gap Opener (Spaltöffner) into the gap at pos.
1. Press the lower part of the ProClip into the gap next to the Gap Opener (Spaltöffner).
3. Pull up the ProClip. Press the upper part of the ProClip at pos 2 until it is attached.