


Manual, Assembly instruction: Brodit 852637

Angled mount

1.)

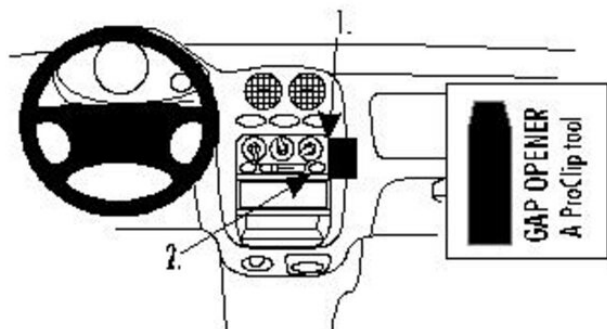

Attention! Read all instructions before attaching the ProClip

1. Press the right part of the ProClip into the gap at pos 1 between the control panel and the panel frame.
2. Press the enclosed Gap Opener (Spaltöffner) into the gap at pos. 2 between the control panel and the panel frame.
3. Press the lower part of the ProClip into the gap next to the Gap Opener (Spaltöffner). Press forward on the ProClip until you see or hear + feel it snap into place.