


Manual, Assembly instruction: Brodit 852679

Angled mount

1.)

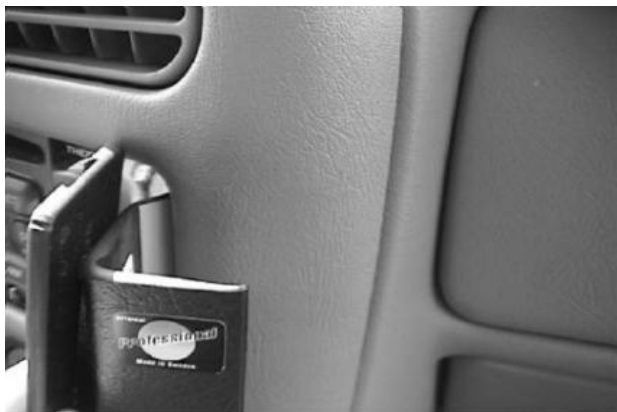

2.)



3.)



4.)



Attention! Read all instructions before attaching the ProClip. Peel off both adhesive tape covers on the ProClip.

1. Press the angled edge on the left side of the ProClip into the gap between the stereo and the surrounding frame.
2. Press forward on the right side on the ProClip so the angled edge snaps into the gap in the console wall.
3. The ProClip is in place.
4. The ProClip is in place.