


Manual, Assembly instruction: Brodit 852682

Angled mount

1.)

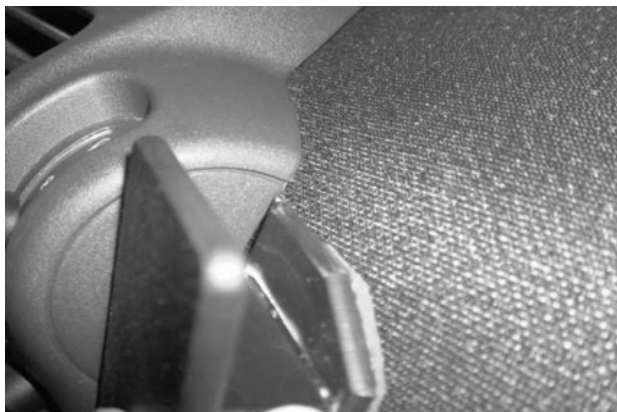

2.)



3.)



4.)



Attention! Read all instructions before attaching the ProClip

1. Peel off the cover of the adhesive tape on the ProClip.
2. Press the lower edge of the left part of the ProClip, with groove, into the gap at pos. 1 between the frame surrounding the control panel and the padded dashboard.
3. Press forward on the ProClip, against the dashboard. Press the upper edge of the left part of the ProClip into the gap.