


Manual, Assembly instruction: Brodit 852850

Angled mount

1.)



2.)

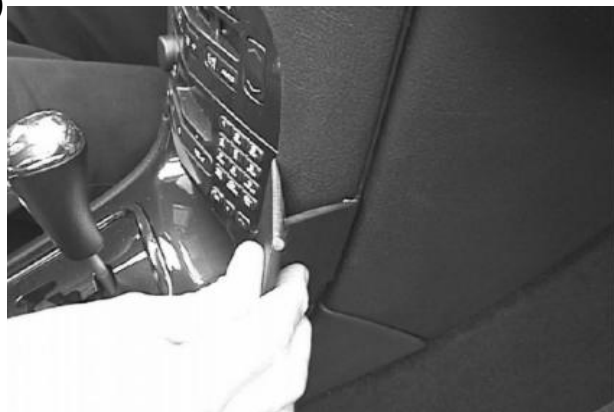

3.)



4.)



Attention! Read all instructions before attaching the ProClip. Peel off both adhesive tape covers on the ProClip.

1. Press the left part of the ProClip into the gap between the control panel and the dashboard.
2. Press the right part of the ProClip into the gap in the dashboard, between the dashboard surrounding the control panel and the lower part of the dashboard.
3. The ProClip is in place.
4. The ProClip is in place.