


Manual, Assembly instruction: Brodit 852866

Angled mount, Low


1.)



2.)

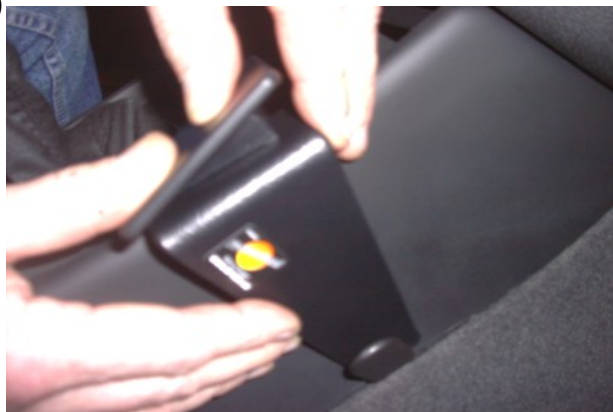

3.)

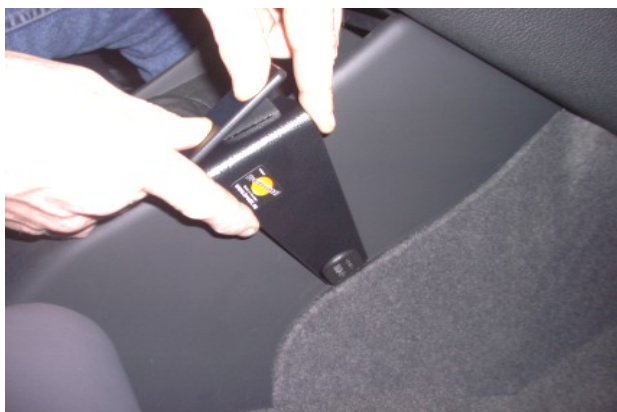

4.)



Attention! Read all instructions before attaching the ProClip.

1. Place the enclosed gap opener over the gap between the console and the floor, where the console meets the floor in an angle. Press the gap opener into the gap to widen the gap. Slide the gap opener upwards/forwards in the gap until it is aligned with the front of the panel surrounding the gear shift. Peel off both adhesive tape covers on the ProClip.
2. Press the lower part of the ProClip into the gap between the console and the gap opener.
3. Hook the upper part of the ProClip over the edge of the console. Pull out the gap opener.
4. The ProClip is in place.