


Manual, Assembly instruction: Brodit 852967

Angled mount

1.)



2.)

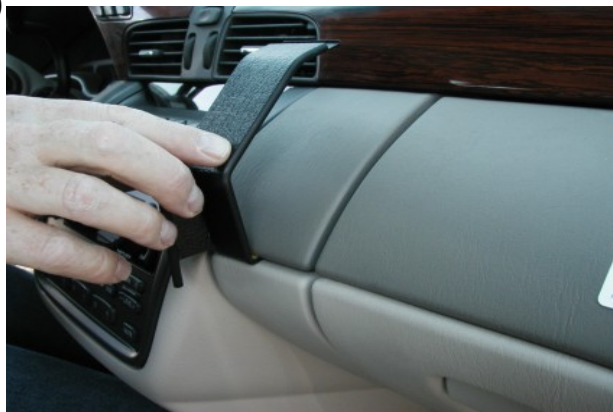

3.)



4.)



Attention! Read all instructions before attaching the ProClip. Peel off the cover on the adhesive tape on the ProClip.

1. Place the curved edge on the lower part of the ProClip towards the gap between the two padded parts of the dashboard.

2. Press the curved edge on the lower part of the ProClip into the gap at the same time you push it forward so the curved edge hooks behind the lower padded part of the dashboard.

3. Press firmly forward on the upper part of the ProClip so the grooved edge goes into the gap between the padded dashboard and the wood grain panel. Press firmly/hard until you see or hear/feel it snap into place.

4. The ProClip is in place.