


Manual, Assembly instruction: Brodit 853020

Angled mount

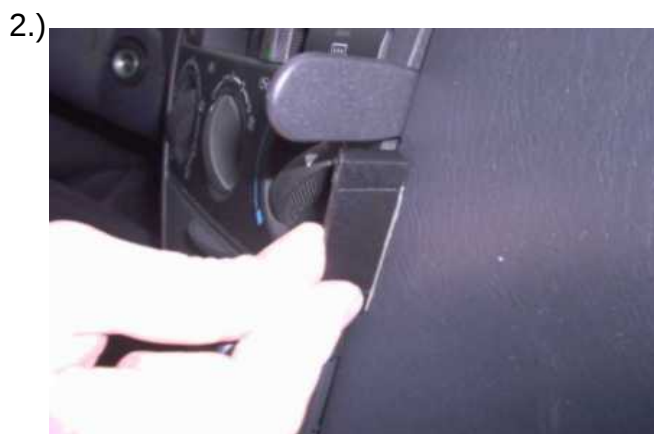

Attention! Read all instructions before attaching the ProClip. This ProClip consists of two parts. Part 1. The attaching part (the smallest part) Part 2. The ProClip face plate

1. Press the thin end of the enclosed gap openers into the gap between the control panel and the dashboard to widen the gap.

2. Peel off the cover of the adhesive tape on Part 1. Press Part 1 into the gap between the gap openers. Press to the right on Part 1, away from the steering wheel, so the angled edge hooks under/behind the control panel and the adhesive attaches to the dashboard. Pull out the gap openers.

3. Open up the predrilled holes in Part 2 with a screwdriver (Philips). Peel off the cover of the adhesive tape on Part 2. Place Part 2 onto Part 1 so the holes match. Screw Part 2 onto Part 1 with the enclosed screws. NOTE! Screw the screws straight into Part 1, in the same angle as Part 1. The ProClip is in place.