


Manual, Assembly instruction: Brodit 853053

Angled mount

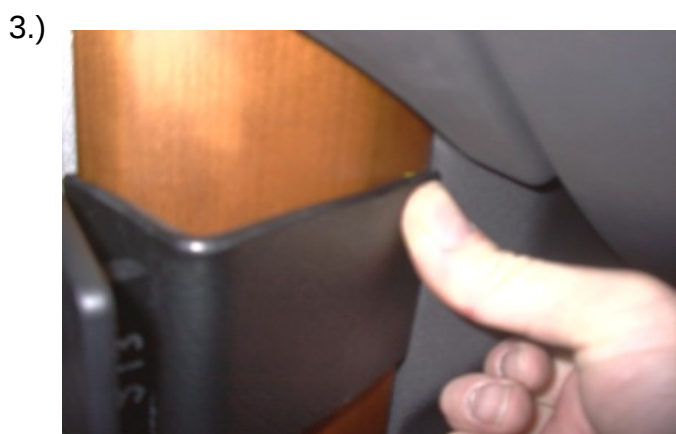

Attention! Read all instructions before attaching the ProClip.

1. Peel off the adhesive tape covers on the ProClip. Press the left part of the ProClip into the gap between the control panel and the surrounding frame.
2. Press forward on the ProClip so the long right edge hooks behind the frame surrounding the control panel.
3. Press on the right part of the ProClip so it hooks properly behind the frame.
4. The ProClip is in place.