
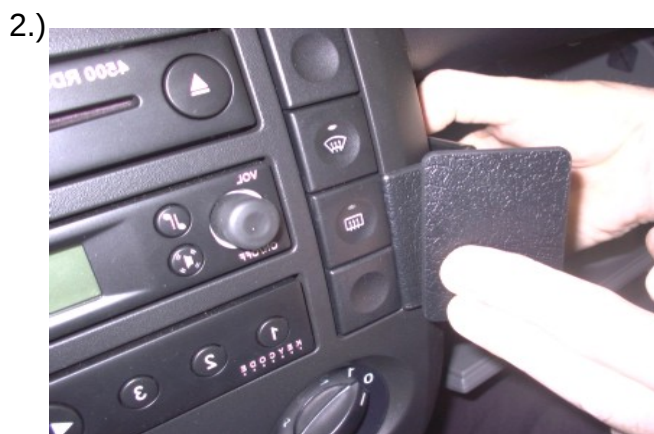


Manual, Assembly instruction: Brodit 853055

Angled mount

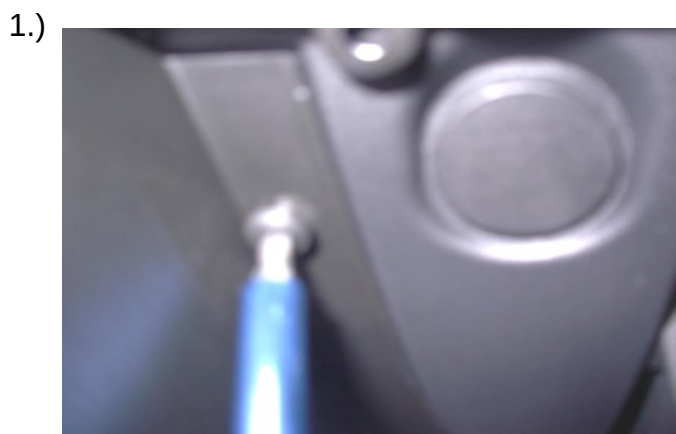

Attention! Read all instructions before attaching the ProClip.

1. Open the glove compartment. Remove the screw in the upper left corner. Peel off the adhesive tape covers on the ProClip.
2. Press the left part of the ProClip into the gap between the buttons and the surrounding frame.
3. Place the right part of the ProClip over the screw hole so the holes match. Screw back the screw. Close the glove compartment.
4. The ProClip is in place.