


Manual, Assembly instruction: Brodit 853057

Angled mount NOT for silver grey/wood grain panel.

1.)

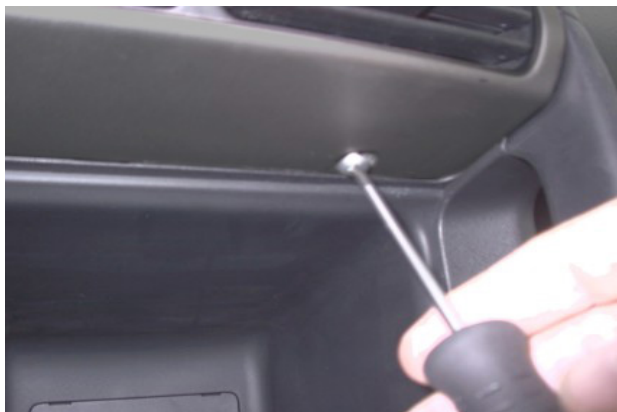

2.)



3.)



4.)



Attention! Read all instructions before attaching the ProClip.

1. Remove the screw below the air vent, in the frame surrounding the air vent. Peel off the adhesive tape cover on the ProClip.
2. Place/Hook the ProClip over the air vent panel edge so the hole in the ProClip matches the hole from the removed screw.
3. Put the screw through the hole in the ProClip (hold it slightly angled) and into the hole in the panel and screw it all the way in.
4. The ProClip in place.