


Manual, Assembly instruction: Brodit 853073

Center mount

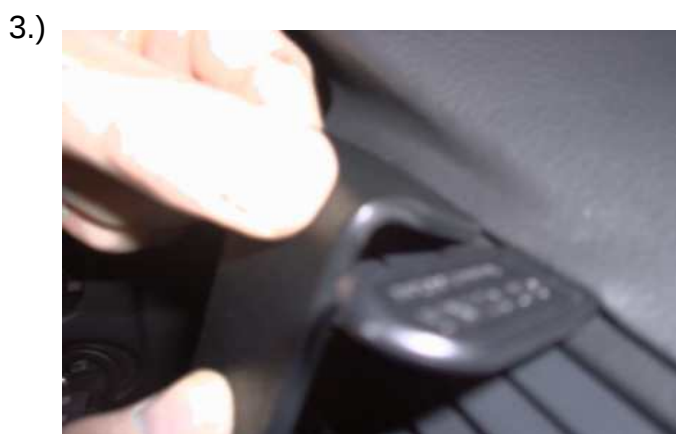

Attention! Read all instructions before attaching the ProClip.

1. Press the thin end of the enclosed gap opener into the gap between the dashboard and the frame surrounding the air vents to widen the gap.
2. Press the lower part of the ProClip into the gap between the dashboard surrounding the air vents and the dashboard surrounding the control panel.
3. Press the upper part of the ProClip into the gap next to the gap opener. Pull out the gap opener.
4. The ProClip is in place.