

Manual, Assembly instruction: Brodit 853081

Angled mount


1.)



2.)



3.)

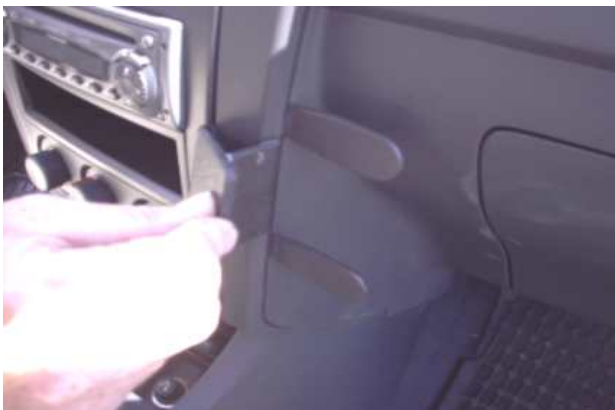

4.)



Attention! Read all instructions before attaching the ProClip

1. Press the thin end of the enclosed gap openers into the gap between the control panel and the surrounding frame to widen the gap. Place the gap openers as shown in the picture, about 8-10 cm apart. Peel off the cover of the adhesive tape on the ProClip.
2. Press the left part of the ProClip into the gap between the gap openers. Pull out the gap openers.
3. Press the gap openers into the gap between the dashboard and the frame surrounding the control panel. Press forward on the ProClip so the right part hooks into the gap between the gap openers. Pull out the gap openers.
4. The ProClip is in place.