


Manual, Assembly instruction: Brodit 853172

Angled mount

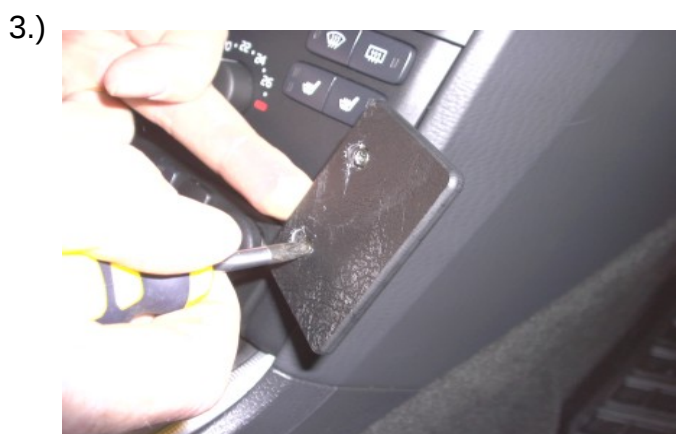

Attention! Read all instructions and look at the pictures before attaching the ProClip. This ProClip consists of two parts. Part 1: Attaching part (the smallest part) Part 2. ProClip face plate

1. Peel off the cover of the adhesive tape on Part 1. Place Part 1 in the same position as in the picture, in the same height. Press the angled edge of Part 1 into the gap between the dashboard and the dashboard.

2. Press to the right on Part 1, away from the steering wheel, so the angled edge hooks behind the control panel and the adhesive attaches to the dashboard.

3. Open up the predrilled holes in Part 2 with a screwdriver (Philips). Peel off the cover of the adhesive tape on Part 2. Place Part 2 onto Part 1 so the holes match and the adhesive is to the left. Screw Part 2 onto Part 1 with the enclosed screws. NOTE: Screw straight into Part 1, in the same angle as Part 1.

4. The ProClip is in place.