


Manual, Assembly instruction: Brodit 853200

Angled mount

1.)

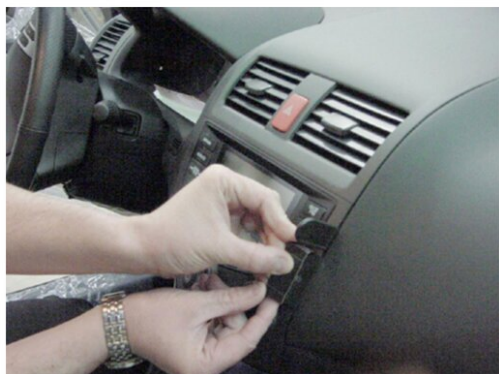

2.)



3.)



4.)



Attention! Read all of the instructions and look at the pictures before attaching the ProClip. This ProClip consists of two parts. Part 1. Attaching part (the smallest part) Part 2. ProClip face plate

1. Press the thin end of the enclosed Gap Opener (Spaltöffner) into the gap between the control panel frame and the dashboard to widen the gap. Peel off the cover of the adhesive tape on Part 1. Press Part 1 into the gap below the Gap Opener (Spaltöffner).

2. Press to the right on Part 1, away from the steering wheel, so the angled edge hooks behind + under the control panel frame and the adhesive tape attaches. Pull out the Gap Opener (Spaltöffner).

3. Open up the predrilled holes in Part 2 with a screwdriver (Philips). Remove the cover of the adhesive tape on Part 2. Place Part 2 onto Part 1 so the holes match and the adhesive tape is on the left side. Screw Part 2 onto Part 1 with the enclosed screw. NOTE! Screw the screws straight into Part 1, in the same angle as Part 1, do not screw the screws into place basing the angle on Part 2.

4. The ProClip is in place.