



Manual, Assembly instruction: Brodit 853215

Center mount

1.)

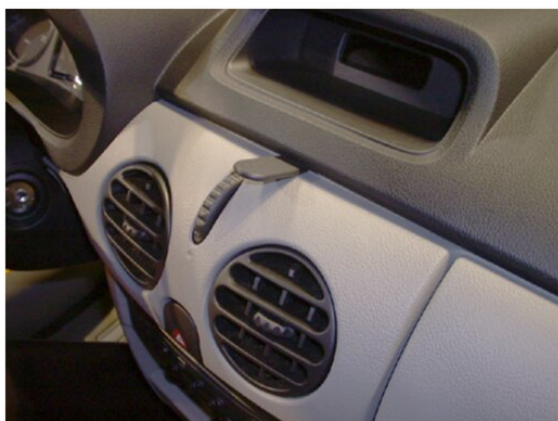

2.)

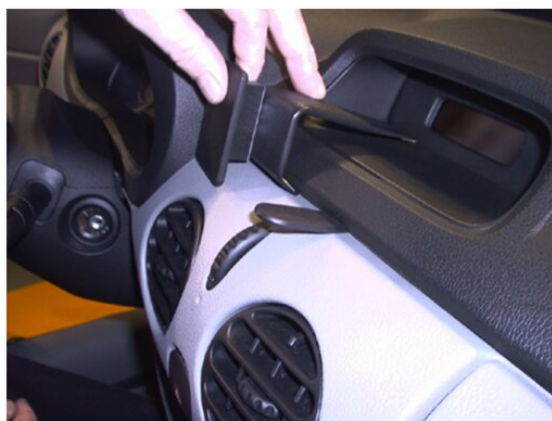

3.)



4.)



Attention! Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Press the thin end of the enclosed Gap Opener (Spaltöffner) into the gap between the panel surrounding the air vents and the dashboard below the dashboard. Peel off the adhesive tape covers on the ProClip.
2. Press the angled edge on the lower part of the ProClip into the gap next to the Gap Opener (Spaltöffner). Pull out the Gap Opener (Spaltöffner).
3. Press forwards on the ProClip so the angled edge on the upper part of the ProClip hooks into the gap between the display and the surrounding frame.
4. The ProClip is in place.