

Manual, Assembly instruction: Brodit 853421

Angled mount


1.)



2.)



3.)

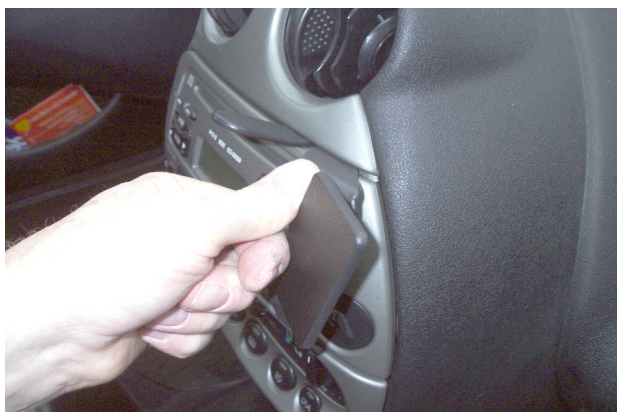

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Press the thin end of the enclosed gap opener into the gap in the control panel, to widen the gap. Peel off the adhesive tape covers on the ProClip.
2. Press the angled edge on the lower part of the ProClip into the gap next to the gap opener. Pull out the gap opener.
3. Press the gap opener into the gap between the control panel and the panel below the air vents. Press the upper part of the ProClip into the gap next to the gap opener. Press forwards on the upper and the lower part of the ProClip so it goes all the way into the gap. Pull out the gap opener.
4. The ProClip is in place.