


Manual, Assembly instruction: Brodit 853422

Angled mount

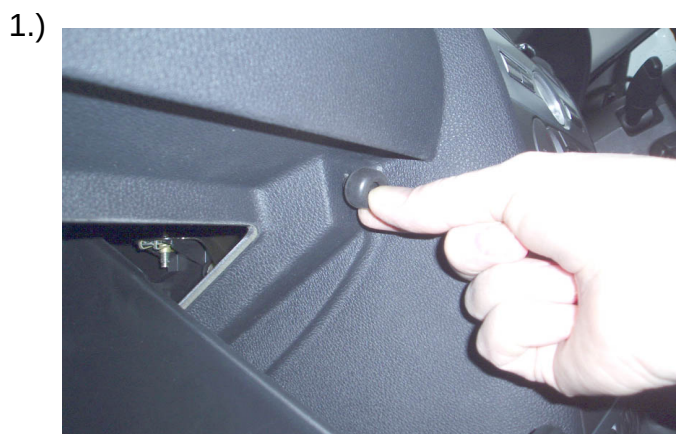

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Open the glove compartment. Remove the rubber-detail, as shown in the picture. Peel off the adhesive tape covers on the ProClip.
2. Press the angled edge on the left part of the ProClip into the gap between the control panel and the surrounding frame.
3. Adjust the position of the right part of the ProClip so the predrilled hole fits with the hole in the dashboard. Place the enclosed button in the hole, so the wide plate is touching the ProClip. Press the button all the way into the gap, so the ProClip is locked onto the dashboard.
4. The ProClip is in place.