


Manual, Assembly instruction: Brodit 853431

Center mount

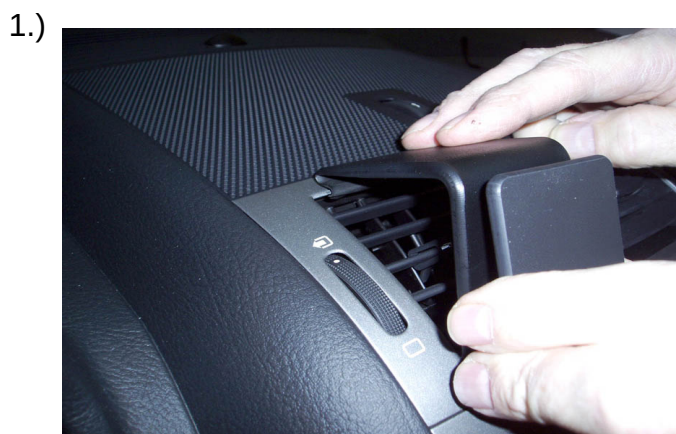

Attention! Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Peel off the adhesive tape covers on the ProClip. Place the curved edge on the upper part of the ProClip by the upper edge of the air vent.
2. Press forwards on the ProClip and press the lower part of the ProClip down towards the air vent.
3. Hook the lower part of the ProClip into the gap inside the lower part of the air vent.
4. The ProClip is in place.