

Manual, Assembly instruction: Brodit 853437

Center mount


1.)



2.)



3.)

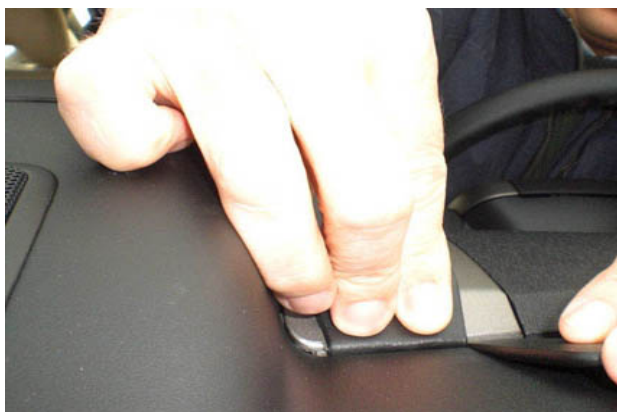

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Hold the enclosed gap opener so the writing "Gap Opener" is facing away from you. Press the thin end of the gap opener into the gap between the dashboard and the silver air vent panel frame. Press down and forward on the thick end of the gap opener so the silver part of the panel frame bends upward and opens the gap wide. (The panel will flex safely) The gap opener should now be almost flat on the dashboard. Peel off the adhesive tape covers on the ProClip.

2. Hook the angled edge on the front part of the ProClip around the upper air vent edge. Place your palm over the face plate as shown in the picture. Press firmly forward. The angled edge on the back part of the ProClip will flex forward and hook over the panel edge next to the gap opener.

3. Press firmly down on top of the back part of the ProClip so the angled edge hooks all the way around the panel edge next to the gap opener. Press until you see or hear/feel it click into place. Pull out the gap opener.

4. The ProClip is in place.