


Manual, Assembly instruction: Brodit 853439

Angled mount NOT for BOSE stereo.

1.)

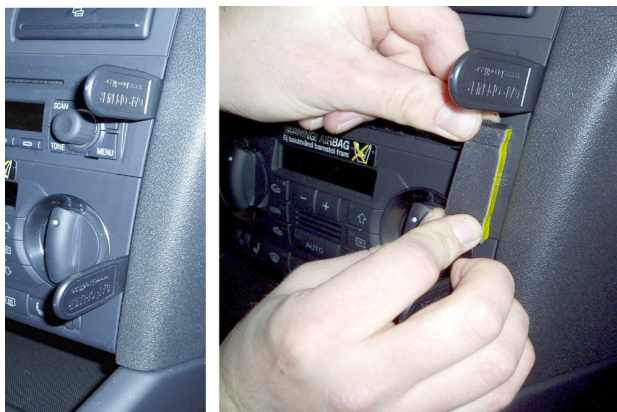

2.)



3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip. This ProClip consists of two parts. Part 1. Attaching part (the smallest part) Part 2. ProClip face plate.

1. Press the thin ends of the enclosed gap openers into the gap between the control panel and the dashboard, to widen the gap. Place the gap openers about 10 cm apart. Peel off the cover of the adhesive tape on Part 1. Press the angled edge on Part 1 into the gap between the gap openers.

2. Press Part 1 away from the steering wheel, so the angled edge hooks behind the control panel and the adhesive tape attaches on the dashboard. Pull out the gap openers.

3. Open up the predrilled holes in Part 2 with a screwdriver (Philips). Peel off the cover of the adhesive tape on Part 2. Place Part 2 onto Part 1 so the holes match and the adhesive tape is on the left. Screw Part 2 onto part 1 with the enclosed screws. Screw straight into Part 1, in the same angle as Part 1.

4. The ProClip is in place.