

Manual, Assembly instruction: Brodit 853481

Angled mount, Low

1.)




2.)



3.)



4.)

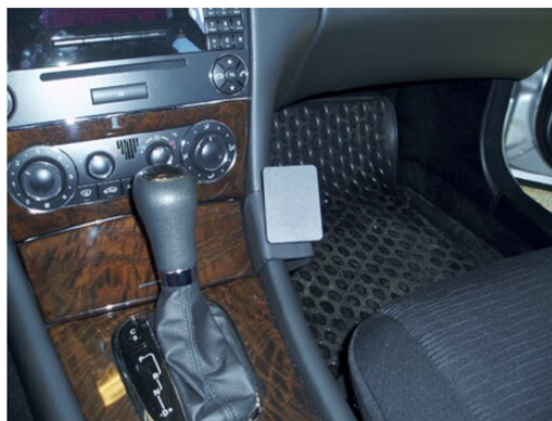

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Peel off the cover of the adhesive tape on the ProClip. Hook the left part of the ProClip over the edge of the console.
2. Press downwards on the right side of the ProClip so the long right part hooks under the edge of the console.
3. The ProClip is in place.
4. The ProClip is in place.