

Manual, Assembly instruction: Brodit 853614

Angled mount


1.)



2.)



3.)

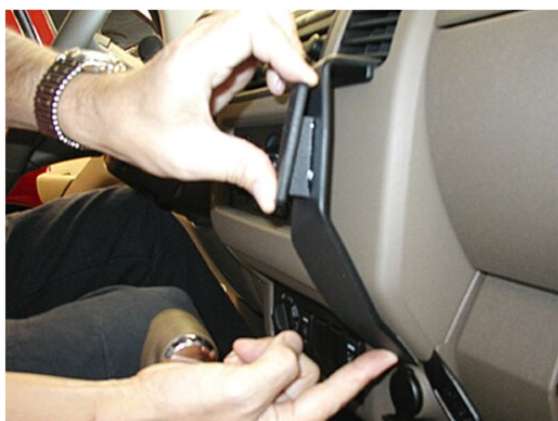

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. To widen the gap, press the thin end of the enclosed Gap Opener (Spaltöffner) into the gap between the dashboard parts, as shown in the picture. Peel off the adhesive tape covers on the ProClip.
2. Hook the grooved edge on the upper part of the ProClip into the lower part of the air vent housing.
3. Pull the ProClip downwards and hook the angled lower edge into the gap next to the Gap Opener (Spaltöffner). Pull out the Gap Opener (Spaltöffner).
4. The ProClip is in place.