


Manual, Assembly instruction: Brodit 853616

Angled mount

1.)



2.)

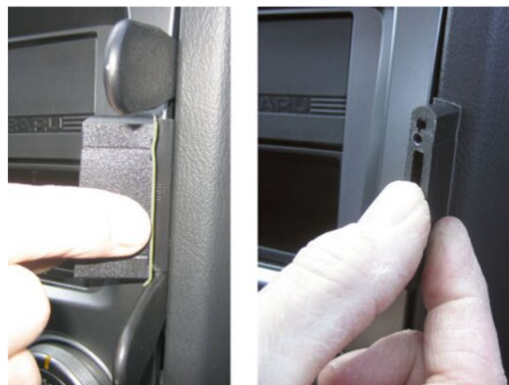

3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip. This ProClip consists of two parts.
Part 1. Attaching part (the smallest part) Part 2. ProClip face plate

1. Press the thin ends of the enclosed Gap Opener (Spaltöffner)s into the gap between the frame surrounding the control panel and the dashboard, to widen the gap. Place them about 10 cm apart. Peel off the cover of the adhesive tape on Part 1. Press Part 1 into the gap between the Gap Opener (Spaltöffner)s.

2. Press Part 1 rightwards, so the angled edge hooks behind the frame surrounding the control panel and the adhesive tape attaches to the dashboard. Pull out the Gap Opener (Spaltöffner)s.

3. Open up the predrilled holes in Part 2 with a screwdriver (Philips). Peel off the cover of the adhesive tape on Part 2. Place Part 2 onto Part 1 so the adhesive tape is on the left side and the holes fit. Screw Part 2 onto Part 1 with the enclosed screws. Screw straight into Part 1, in the same angle as Part 1.

4. The ProClip is in place.