


Manual, Assembly instruction: Brodit 853735

Center mount

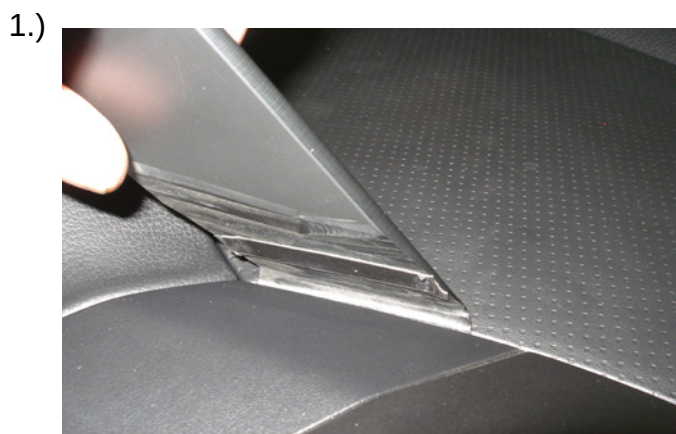

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the surface where the ProClip is to be installed. Peel off the adhesive tape covers on the ProClip. Press the angled edge on the upper part of the ProClip into the gap on top of the dashboard.
2. Flip the ProClip downwards so the angled upper edge hooks into the gap.
3. Hook the angled edge on the lower part of the ProClip into the upper edge of the air vent.
4. The ProClip is in place.