


Manual, Assembly instruction: Brodit 853748

Angled mount


1.)

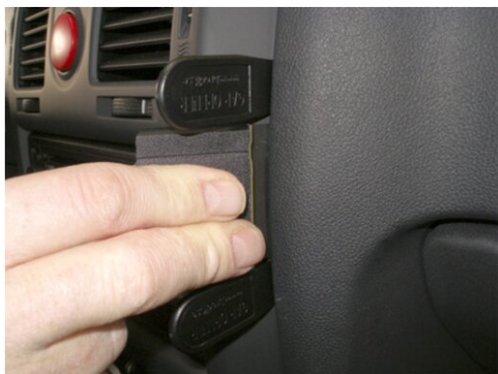

2.)



3.)

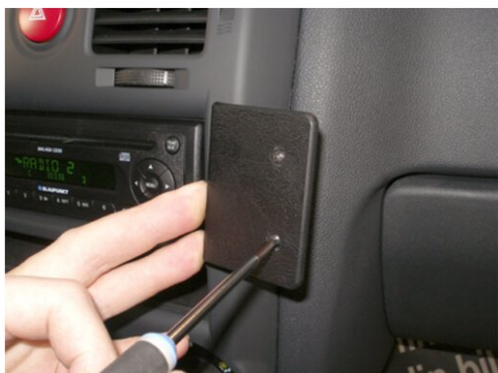

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip. This ProClip consists of two parts.
Part 1. Attaching part (the smallest part) Part 2. Mounting plate

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Press the thin end of the enclosed Gap Opener (Spaltöffner)s into the gap between the dashboard and the frame surrounding the control panel, to widen the gap. Peel off the cover of the adhesive tape on Part 1. Press the angled edge on Part 1 into the gap between the Gap Opener (Spaltöffner)s.

2. Press Part 1 rightwards so the angled edge hooks behind the frame surrounding the control panel. Pull out the Gap Opener (Spaltöffner)s.

3. Open up the predrilled holes in Part 2 with a screwdriver (Philips). Peel off the cover of the adhesive tape on Part 2. Place Part 2 onto Part 1 so the adhesive tape is to the left and the holes match. Screw Part 2 onto Part 1 with the enclosed screws. Screw straight into Part 1, in the same angle as Part 1.

4. The ProClip is in place.