


Manual, Assembly instruction: Brodit 853858

Angled mount

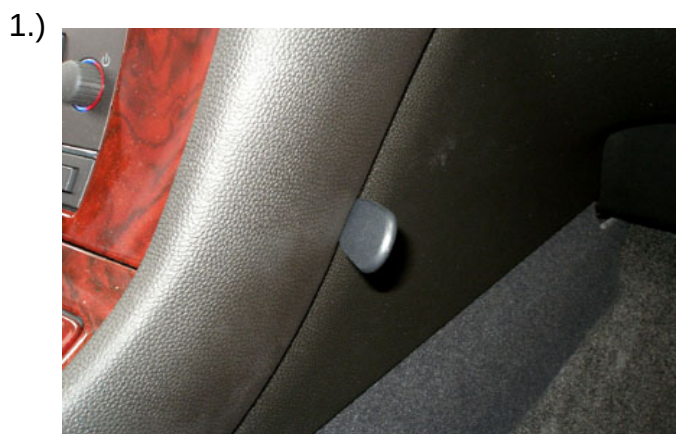

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Press the thin end of the enclosed gap opener into the gap in the sidewall, to widen the gap. Peel off the cover of adhesive tape on the ProClip.

2. Press the curved edge on the ProClip into the gap above the gap opener. Pull out the gap opener.

3. Flip the ProClip towards the climate control. Place your index fingers behind the ProClip and pull it towards you, and hook the angled edge over the console edge.

4. The ProClip is in place.