

Manual, Assembly instruction: Brodit 853993

Angled mount


1.)



2.)



3.)

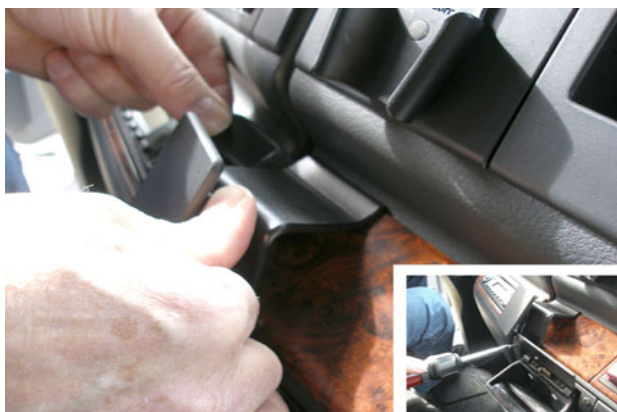

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Open the ashtray. Loosen the screws by the upper edge of the ashtray. Open the glove compartment.

2. Press the thin end of the enlcsed gap opener into the gap between the panel and the dashboard, to widen the gap. Peel off the adhesive tape covers on the ProClip. Press the curved edge on the lower part of the ProClip into the gap between the frame surrounding the glove compartment and the dashboard.

3. Flip the ProClip upward/forward so the curved lower edge hooks behind the frame surrounding the glove compartment. Press/hook the angled edge on the upper part of the ProClip into the gap between the panel and the dashboard. Pull out the gap opener. Retighten the screws by the ashtray. Close the glove compartment.

4. The ProClip is in place.