

Manual, Assembly instruction: Brodit 854051

Center mount


1.)



2.)



3.)

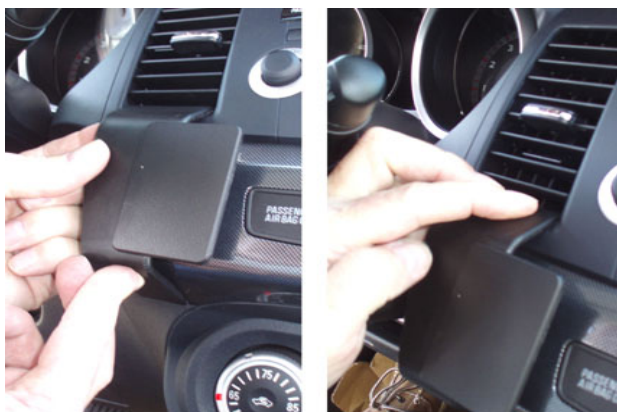

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Press the thin end of the enclosed gap opener into the gap between the dashboard trim and the padded dashboard, to widen it. Peel off the cover of adhesive tape on the ProClip.

2. Hook the angled edge on the lower part of the ProClip into the gap between the bottom part of the air vent and the surrounding panel frame. Press the angled edge on the lower part of the ProClip into the gap next to the gap opener.

3. Press upwards on the lower outer part of the ProClip with your right hand and steer the upper part of the ProClip into the bottom part of the air vent with your left hand. Press down on top of the ProClip to make sure it is properly in place and for best possible attachment of the adhesive tape. Pull out the gap opener.

4. The ProClip is in place.