

Manual, Assembly instruction: Brodit 854071

Center mount NOT for models with factory navigation.


1.)



2.)



3.)

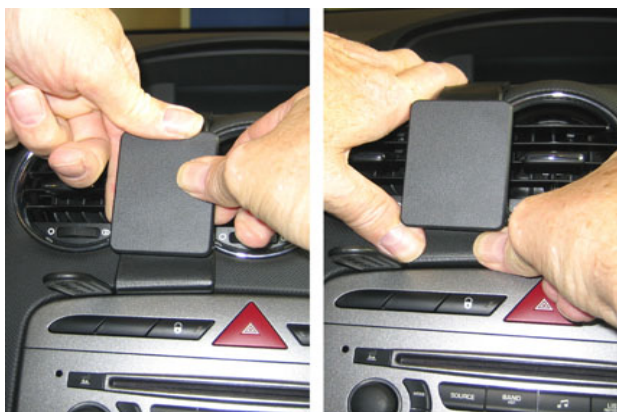

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Press the thin end of the enclosed gap opener into the gap between the frame surrounding the display and the panel surrounding the air vents, to widen the gap. Peel off the adhesive tape covers on the ProClip. Press the angled edge on the upper part of the ProClip into the gap next to the gap opener.
2. Flip the ProClip downward so the angled upper edge hooks into the gap. Press down on top of the ProClip so the angled edge goes all the way into the gap. Pull out the gap opener.
3. Press the gap opener into the gap between the control panel and the dashboard. Hook the angled edge on the lower part of the ProClip into the gap next to the gap opener. Press forward on the lower part of the ProClip so the angled edge goes all the way into the gap. Pull out the gap opener.
4. The ProClip is in place.