

Manual, Assembly instruction: Brodit 854078

Angled mount


1.)



2.)



3.)

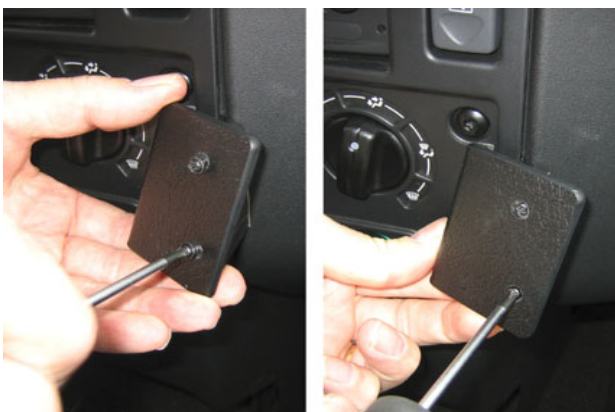

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip. This ProClip consists of two parts. Part 1: Attaching part (the smallest part) Part 2: ProClip face plate

1. Peel off the cover of the adhesive tape on Part 1. Press the angled edge on Part 1 into the gap between the control panel and the dashboard.

2. Flip Part 1 rightward, away from the steeringwheel, so the angled edge hooks behind the control panel and the adhesive tape attaches to the dashboard.

3. Open up the predrilled holes in Part 2 with a screwdriver (Philips). Peel off the adhesive tape cover on Part 2. Place Part 2 onto Part 1 so the holes match. Screw Part 2 onto Part 1 with the enclosed screws. Screw straight into Part 1, in the same angle as Part 1.

4. The ProClip is in place.