


Manual, Assembly instruction: Brodit 854083

Angled mount

1.)



2.)

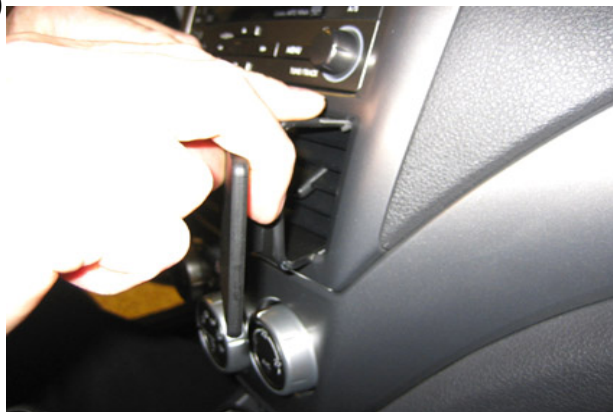

3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Peel off the adhesive tape covers on the ProClip. Place the lower part of the ProClip into the lower part of the air vent housing.
2. Press the upper part of the ProClip downward/forward so the upper edge goes into the upper part of the air vent housing.
3. Press the lower part of the ProClip downward and the upper part of the ProClip upward so the adhesive tapes attach inside the air vent housing.
4. The ProClip is in place.