


Manual, Assembly instruction: Brodit 854122

Center mount

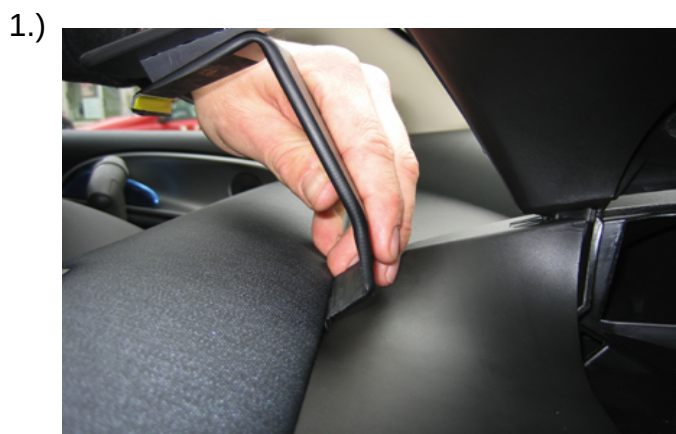

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Peel off the cover of the adhesive tape on the ProClip. Place the upper edge of the ProClip by the gap on top of the dashboard. Pull the ProClip toward you and then press it downward so the angled edge goes into the gap.
2. Flip the ProClip toward the air vent so the angled upper edge hooks into the gap.
3. Hook the angled edge on the lower part of the ProClip under the upper edge of the air vent.
4. The ProClip is in place.