

Manual, Assembly instruction: Brodit 854127

Center mount NOT for models with navigation screen.


1.)



2.)



3.)

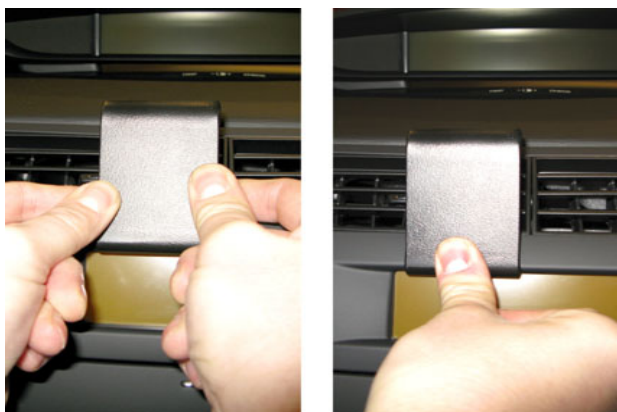

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Press the thin end of the enclosed gap opener into the gap between the air vent frame and the dashboard, to widen the gap. Peel off the adhesive tape covers on the ProClip. Press the angled edge on the upper part of the ProClip into the gap next to the gap opener.

2. Press down on top of the ProClip so the angled edge goes all the way into the gap.

3. Hook the lower part of the ProClip under the air vent frame. Press forward on the lower part of the ProClip so it hooks into place properly. Pull out the gap opener.

4. The ProClip is in place.