

Manual, Assembly instruction: Brodit 854291

Center mount


1.)



2.)



3.)

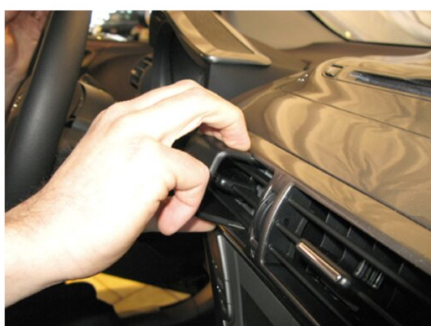

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip. 1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape covers on the ProClip. Place the lower part of the ProClip in the lower part of the air vent so the edge lies against the air vent frame. 2. Press the upper and lower part of the ProClip together so the ProClip flexes and press the upper edge forward so it goes in under the upper part of the air vent. 3. Release the pressure so the ProClip locks into place and the adhesive tapes attach. 4. The ProClip is in place.