

Manual, Assembly instruction: Brodit 854298

Center mount


1.)



2.)



3.)

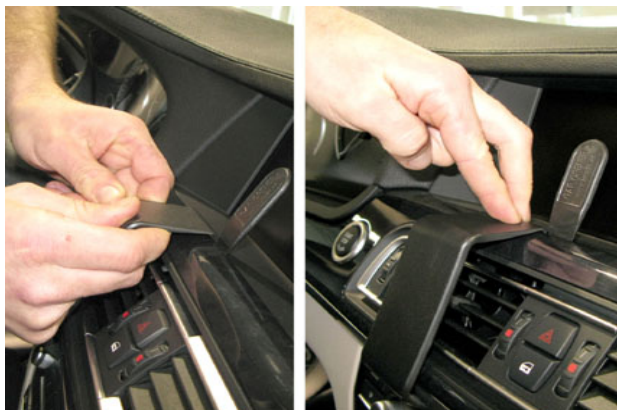

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Press the thin end of the enclosed gap opener into the gap between the trim and the panel surrounding the display, to widen the gap. Peel off the adhesive tape cover on the ProClip. Press the angled edge on the lower part of the ProClip into the gap between the control panel and the surrounding frame.

2. Press the angled edge on the lower part of the ProClip all the way into the gap.

3. Hook the angled edge on the upper part of the ProClip into the gap next to the gap opener. Press down on top of the ProClip so the angled edge goes all the way into the gap. Pull out the gap opener.

4. The ProClip is in place.