

## Manual, Assembly instruction: Brodit 854365

Center mount

1.)




2.)



3.)



4.)

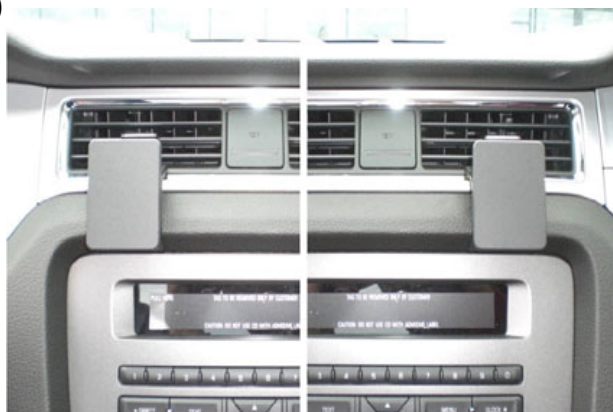

**Please read all of the instructions and look at the pictures before attaching the ProClip. This ProClip fits models with and without factory navigation screen, and can be attached below either air vent as shown in the picture. You can also have to ProClip attached at the same time.**

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the cover of adhesive tape on the ProClip. Hold the ProClip with the inside facing up. Press the angled edge on the lower part of the ProClip into the gap between the center console panel frame and the surrounding padded part of the dashboard overhang. Then flip the ProClip upwards, towards the air vent, so the angled edge on the lower part hooks behind the center console panel frame.

2. Place your index fingers underneath the top part of the ProClip. Then push upwards and hook the angled edge around the air vent edge.

3. The ProClip mount is in place.

4. The ProClip mount is in place.