

Manual, Assembly instruction: Brodit 854413

Angled mount


1.)



2.)



3.)

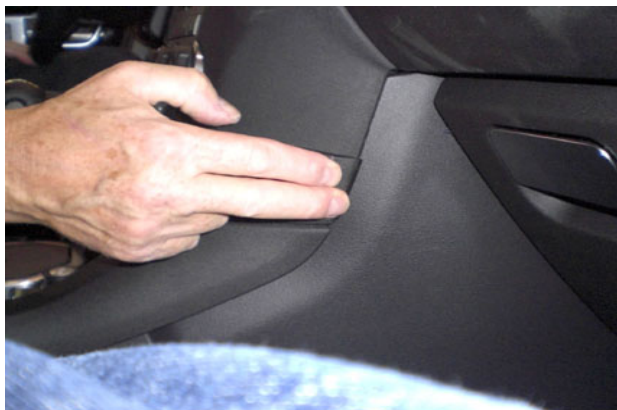

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the cover of adhesive tape on the ProClip. Place the angled edge on the left side of the ProClip over the console edge and press the upper part of the angled edge into the gap between the center console panel and the console edge.

2. Press firmly forward on the right side of the face plate so the angled edge hooks around the sidewall edge.

3. Press on the right side of the ProClip, towards the sidewall, to make sure the angled edge is all the way into the gap.

4. The ProClip is in place.